



The pump out valve should be connected to the 2" cam-lock should never be opened unless it is connected to a pump truck, external holding tank, or directly to a septic or sewer system. Waste can spill if this valve is open and unprotected